VIDPEEP.COM

DDV2 User manual

Attention: Read Prior to Use. Failure to follow directions will void warranty.

1. **Do not dismantle the camera or the main frame**
2. **Water prevention should be exercised at all times**
3. **Avoid direct impact and/or severe vibration**
4. **Recommended operating temperature : -15℃~50℃**

Before installation:
Replace the existing door viewer on the door or drill a 14-30mm hole in the door at desired position.

Installation:

1. Insert the camera from outside, assure the doorbell button on the camera is at the bottom.
2. Fit the back cover of the mainframe into the end of the lens.
3. Screw the locking barrel onto the threaded part of the camera, use a coin to firmly tighten.
4. Connect the single wire from the lens to the connector in the mainframe.
5. Insert 3 x AAA batteries.
6. Close the mainframe and hook the screen over the bracket at the top of the back cover, push down to firmly secure.

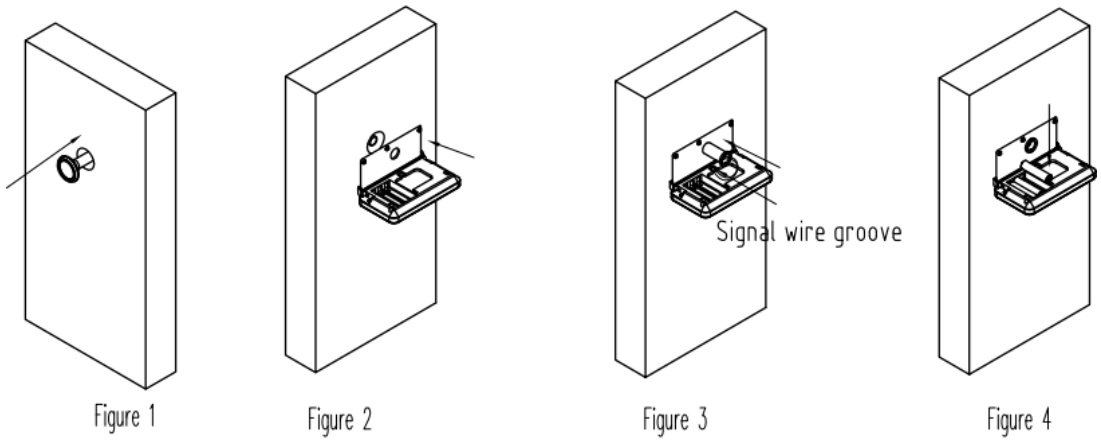

Figure 1 Figure 2 Figure 3 Figure 4

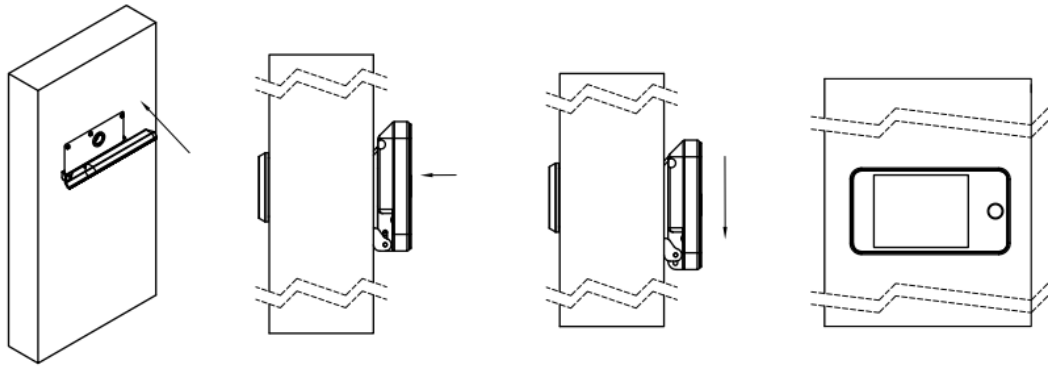

Figure 5 Figure 6 Figure 7 Figure 8

Specifications

1. Screen size: 4.0 inch LCD 800*480 Pixel
2. Viewing angle: 160 degree
3. Sensor: 2.0Mega Pixel CMOS
4. Power source: 3 AAA batteries (approx. 3000 views)
5. Dimension: 115(W)x 64(H)x16(D)mm
6. Net Weight: 240g
7. Door thickness compatibility: 42-72mm
8. Fits barrel hole: 14-30mm
9. Material: Plastic and brass

Indoor Host Operation

1. **⏻ button**
   Press ⏻ button, screen will turn on for approx. 15 seconds then turns off automatically thereafter.
2. **Image capture**
   Press ⏻ button, hold 📷 button for 2 seconds.
3. **Browse pictures**
   Press ⏻ button followed by ⌃ or ⌄ button to browse pictures.

4. **Delete pictures**

   While browsing select a picture, hold for 2seconds. Interface will prompt: Delete? Y/N, press button for YES, button for NO.

5. **Setup date and time**

   Press button, hold button for 4seconds, date and time will show. Press button to move cursor, press or button to set the time or the date , press button to quit.

6. **Return**

   When browsing/setup, press button to return to main screen.

Outdoor bell operation

Press function on the peephole outside, doorbell in the mainframe will ring and image will be captured.

Notes

When the LCD display starts to flicker, please replace the batteries at the earliest opportunity.

FOR ALL SERVICE AND WARRANTY ISSUES….PLEASE VISIT WWW.VIDPEEP.COM